



EASY POPPING INSTRUCTIONS

1. POUR 1/4 CUP OF POPCORN KERNELS INTO EZ POPCORN MAKER.
2. ADD 1 TEASPOON OF COOKING OIL OR CANOLA OIL (OPTIONAL).
3. CLOSE THE POPCORN MAKER LID BY LOCKING BOTH SNAPS.
4. PLACE IN MICROWAVE AND SET ON HIGH FOR FOUR MINUTES.
5. WHEN POPCORN STOPS POPPING FOR TWO SECONDS BETWEEN POPS, STOP YOUR MICROWAVE AND REMOVE THE EZ POPCORN MAKER. CAUTION: CONTENTS WILL BE HOT. ALWAYS HOLD BY HANDLE (COOKING TIME WILL VARY BASED ON MICROWAVE OVEN).
6. ADD A SPRINKLE OF SALT OR ANY OF YOUR FAVORITE SEASONINGS.



TOP RACK DISHWASHER SAFE

For customer service call 888.7.VIATEK or visit us online at viatekproducts.com

Pour le service à la clientèle appelez le 888.7.VIATEK ou visitez viatekproducts.com

Para servicio al consumidor llame al 888.7.VIATEK o visite viatekproducts.com



Read instructions
Before Operating

MADE IN
TAIWAN



Viatek No Question Protection - Protect your product with Viatek Warranty Services. Product is replaced or reimbursed 100%. Protection for 1-year beyond our standard warranty. No shipping charges, no deductible. Your product is protected from any mechanical or electrical failures caused by power surges or manufacturer's defects. Order online at viatekproducts.com today.



DESIGNED



IN THE USA

© 2012 VIATEK CONSUMER PRODUCTS GROUP, INC. All specifications and prices are subject to change without notice. All rights reserved.